



# Thermostar Steam Iron

User manual



1. **Steam buttons** for impulse steam and continuous steam
2. **Cork handle**
3. **Cable joint**
4. **Temperature dial** must always be on maximum
5. **Temperature light** indicates the heating up of the sole, and switches off when the temperature is reached
6. **Soleplate** with special patented aluminium alloy
7. **Silicon pad**
8. **Connecting tube** supplies the appliance with electricity and steam
9. **Plug** for connection to Termostar Dry Steam Clean
10. **Anti-scale rod** on the back of the soleplate

## Technical Data



Voltage  
220 V



Frequency  
50/60 Hz



Power  
800 W



Weight  
appr. 1,5 kg



Power cord  
5 pin



Dispose this appliance separated from household waste at disposal points for electrical and electronic equipment (as per the WEEE directive of the EU)

## Proper use

The Thermostar Steam Iron is suitable for use in connection with either the Thermostar Dry Steam Cleaner Avantgarde or Professional models.

It is only suitable for ironing garments and linen. No liability is assumed for damages caused by improper use or incorrect operation.



## Before first use

Ensure that all packaging material has been carefully removed from the iron.

Before using for the first time, iron over an old garment with steam for a few seconds to remove any production residue.


## Safety instructions

- ★ The hot soleplate, as well as hot steam can cause burns on contact with the skin.
- ★ Do not leave the iron unattended while it is in operation.
- ★ Ensure to keep the iron out of the reach of children or pets while it is hot.
- ★ Use the iron only on a flat and stable surface.
- ★ Always allow the iron to cool down completely before putting it away.
- ★ The iron is not intended for use by children or persons with limited physical or mental capabilities.
- ★ Do not use if the iron or cord has obvious damage. In this case, contact your dealer.
- ★ Make sure that no other high wattage appliance is operating on the same circuit.

## Ironing with Thermostar Steam Iron

Firstly, connect the plug to your water-filled Thermostar Dry Steam Cleaner and switch it on.

Place your Thermostar next to the ironing board and place the cord spirally around the antenna, so that the cord is relieved of tension and will not bother you when ironing. The iron should always be placed on the silicone pad provided.

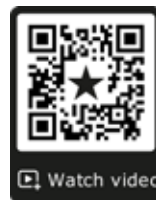

When the steam in the Thermostar Dry Steam Cleaner reaches 160 degrees, the appliance is ready for use.

Always iron with the highest temperature setting (•••). For all sensitive materials and garments with dark color, make sure to use the Teflon sole, which is available as an accessory.

### Recommendation

It is recommended to iron thick fabrics by using the suction function of your ironing board.

Always iron thin fabrics with an inflated ironing board.

For a refreshing and vertical steaming of garments, hold them up with a coat hanger and drive the steaming iron in the desired places with small distance.

Again, be sure to use the Teflon sole.



If necessary, remove the Teflon sole after ironing, otherwise damage and oxidation of the soleplate may occur.

Switch off your Thermostar Dry Steam Cleaner before disconnecting the plug connecting the iron to your Thermostar.


Allow the iron to cool completely before putting it away.

## Teflon soleplate

The Teflon soleplate available as an option is especially suitable for dark and heat-sensitive materials, as well as items of laundry with imprints or patches. It can also be used for refreshing and vertical steaming of laundry items.

The Teflon soleplate can be mounted and removed during ironing by inserting the Thermostar Steam Iron into the Teflon soleplate and pulling the spring completely over the iron with the rubber strap from the front.

Take care not to touch the soleplate when the iron is hot!

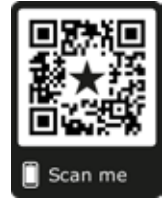

After ironing with the Teflon sole, remove it from your iron, otherwise damage and oxidation of the soleplate may occur.

## Thermostar Steam Ironing station

For a more professional ironing experience, you can use the separately available Thermostar Steam Ironing Station, which boasts a heatable ironing surface, as well as suction and inflation function.

## Cleaning and care

Clean the plastic and metal parts of your Thermostar Steam Iron regularly with a damp, soft cloth.

Once a year, you can unscrew the anti-scale rods on the back of the soleplate with a commercially available allen key.

Place the rods in a decalcifying solution overnight. Before restarting, please rinse it thoroughly.

Store the iron in a dry place. The temperature should not fall below 5 degrees Celsius.

## Malfunctions and Service

If your Thermostar Steam Iron malfunctions in spite of proper handling, please contact your Thermostar dealer immediately to discuss further action.



Thermostar Handels-GmbH  
Auen-Süduferstraße 67  
9220 Velden  
Tel.: +43 (0) 4274 2821  
info@thermostar.info  
www.thermostar.info

FOGADBEI011809EN10